



Brush Reel - 22 Gm R101489



Details

R&R Products Brush Reels are an exciting concept in greens maintenance to clean sand and other debris left on grass surfaces after top dressing. If left on the turf, this sand and debris can cause dulling and excessive wear on mowing reels and bed knives. However, with the use of R&R Brush Reels, sand and debris are easily swept into conventional grass baskets. R&R Brush Reels are also used to stand turf up before mowing to give a cleaner, more uniform and truer putting surface. Designed with four replaceable brushes mounted in a metal frame, simply replace regular mowing reels with R&R Brush Reels and adjust bedknife to clear the brushes. The height of cut should be set to the top of the grass blades or slightly below. *Remove bedknife for the removal of pine needles. SUGGESTED USAGE: Verticutting - Dew Removal - Leaf Clean Up - Thatch Prevention Prior to Overseeding - Grooming before Mowing - Removal of Excessive Top Dressing

- Cleans Sand and other Debris off Grass Surfaces
- Stands up grass for cleaner cuts
- Equipped with four replaceable polyethylene brushes

Specifications

Manufacturer

R&R Products

Fits Models

Jacobsen PGM 19

Jacobsen PGM 22

Baber Turf Equipment Co.

Unit 6 / 10 Firth Street Auckland, 2113

09 294 6040

<https://baber.rrproducts.com/>



Brush Reel - 22 Gm

R101489



Replacement Parts

R150425	Bolt - Hex HD 8-32 x 5/8
R150481	Brush Assy - Brush Reel
R3296-9	Locknut - Comb

Baber Turf Equipment Co.

Unit 6 / 10 Firth Street Auckland, 2113
09 294 6040

<https://baber.rrproducts.com/>